


# ASSEMBLY GUIDE

For Wind Foils - Evolution Generation  
Carbon and Aluminium

30mm	_____
25mm	_____
22mm	_____
20mm	_____
19mm	_____
14mm	_____
12mm	_____

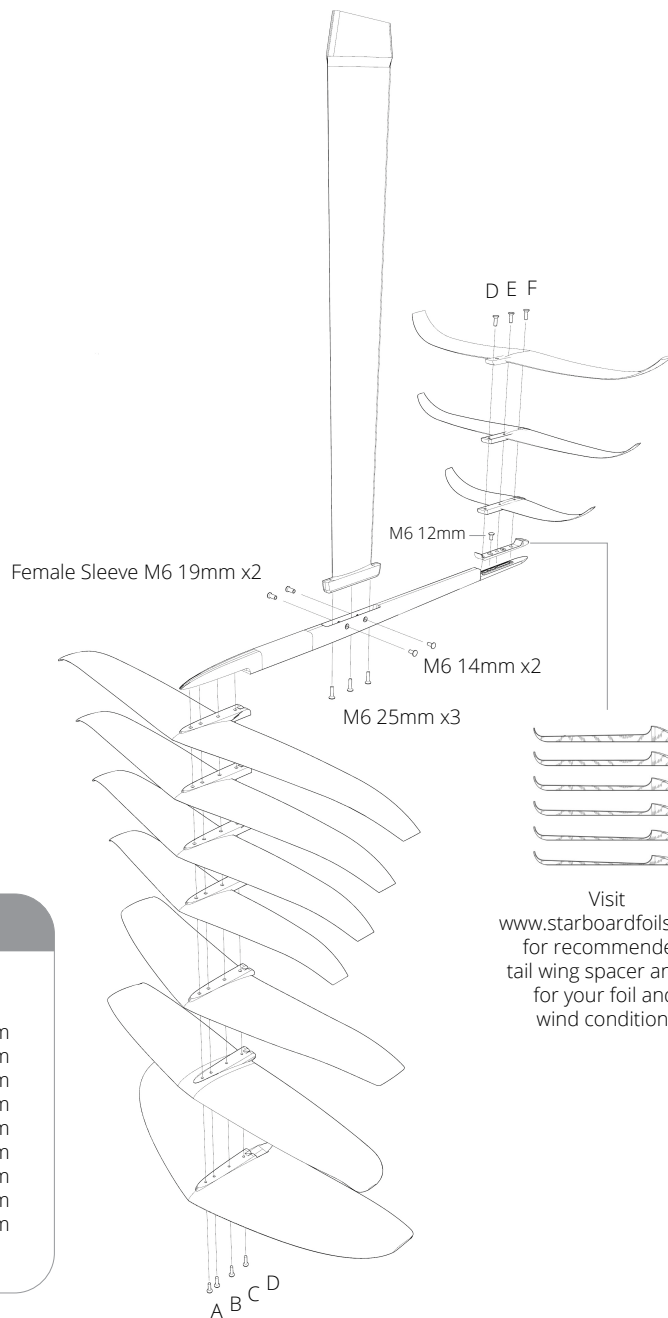

## Tail Wing Bolts (with Angle Spacer: -2° / -1.5°)

	D	E	F
200 -2° Thin	22mm	20mm	20mm
255 -2° Thin	22mm	20mm	20mm
255 -2°	22mm	20mm	20mm
255	22mm	20mm	20mm
330	22mm	20mm	20mm
500 Freeride	22mm	20mm	20mm

## Tail Wing Bolts (with Angle Spacer: -1°)

	D	E	F
200 -2° Thin	22mm	22mm	22mm
255 -2° Thin	22mm	22mm	22mm
255 -2°	22mm	22mm	22mm
255	22mm	22mm	22mm
330	22mm	22mm	22mm
500 Freeride	22mm	22mm	22mm

## Tail Wing Bolts (with Angle Spacer: 0° / -0.5°)

	D	E	F
200 -2° Thin	22mm	22mm	22mm
255 -2° Thin	22mm	22mm	22mm
255 -2°	22mm	22mm	22mm
255	22mm	22mm	22mm
330	22mm	22mm	22mm
500 Freeride	22mm	22mm	25mm

## Tail Wing Bolts (with Angle Spacer: +0.5° / +1°)

	D	E	F
200 -2° Thin	22mm	25mm	25mm
255 -2° Thin	22mm	25mm	25mm
255 -2°	22mm	25mm	25mm
255	22mm	25mm	25mm
330	22mm	25mm	25mm
500 Freeride	22mm	25mm	25mm

## Front Wing Bolts

	A	B	C	D
Millennium 1000	22mm	25mm	25mm	25mm
900	22mm	25mm	25mm	25mm
800	22mm	25mm	25mm	25mm
725	22mm	25mm	25mm	25mm
650	22mm	25mm	25mm	25mm
575	22mm	25mm	25mm	25mm
Freeride 1100	25mm	30mm	30mm	25mm
SuperFlyer 1300	25mm	25mm	30mm	30mm
SuperCruiser 1700	30mm	30mm	30mm	30mm

Visit  
[www.starboardfoils.com](http://www.starboardfoils.com)  
for recommended  
tail wing spacer angles  
for your foil and  
wind conditions